


# 302: Wall Unit Instructions

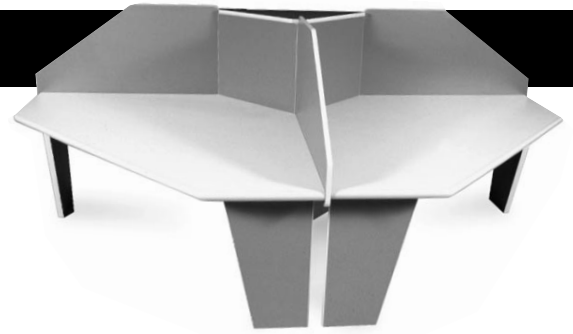

## Hardware List:


Qty.	Item
6	Oval Grommets
40	#8 Screws (1½")
10	¼" - 20 x 2¼" Carriage Bolts
11	¼" - 20 x 3½" Hex Head Bolts
21	¼" - 20 Hex Nuts
21	¼" - Washers

Thank you for purchasing your DEPCO Technology Lab Furniture! If you need further assistance, please call 1-800-767-1062.

## Step 1:

Insert **legs** into slots in **frames**.

**Note:** Welds should be up on steel frame.

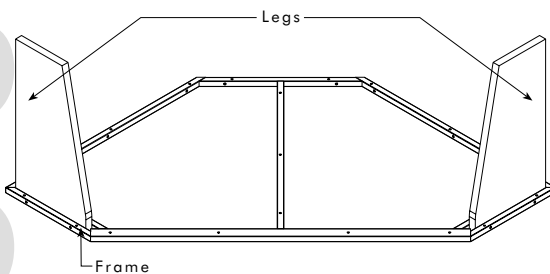


## Step 2:

Insert (2) 3½" bolts into each **leg** and then place nuts and washers on bolts.

**Note:** It may be required to tap bolts through the holes with a hammer.


Tighten all bolts securely with nuts and washers.

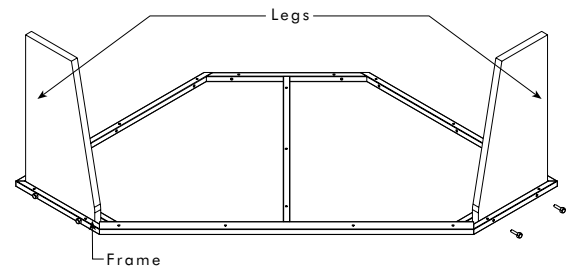

## Step 3:

Rotate assembly 180 degrees. Lock two **back panels** with 3 white assembly fittings and secure with (4) 2¼" carriage head bolts. Place nuts and washers on bolts.


**Note:** It may be required to tap bolts with a hammer.

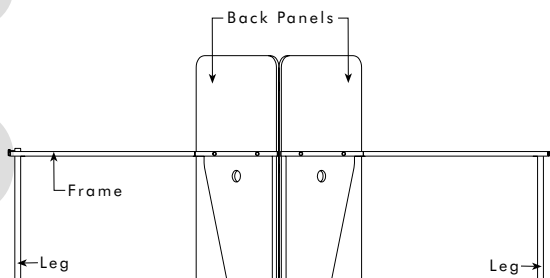

## Step 4:

Place **middle panel** on using the hole locations and secure with (3) 3½" hex head bolts. Place nuts and washers on bolts.

Place two **side panels** on using the hole locations and secure with (6) 2¼" carriage head bolts with washers and nuts.

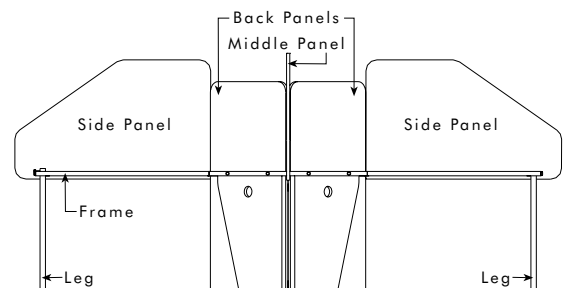

## 302: Wall Unit Instructions


### Step 5:

Place **top** on securing with 1½" wood screws.

**Note:** DO NOT over tighten screws or they will strip out.

Insert Grommets in pre-drilled holes.

**Note:** Grommets may require tapping with a hammer.

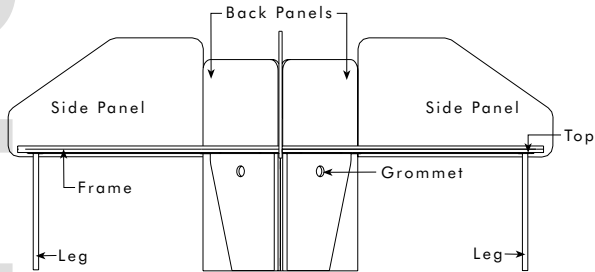

### Step 6:

Place **corner cap** and secure with turn of 2 white assembly fittings.

