


304: Quad Instructions

Hardware List:

Qty.	Item
12	Oval Grauments
80	#8 Screws (1½")
8	¼" - 20 x 2¼" Carriage Bolts
28	¼" - 20 x 3½" Hex Head Bolts
36	¼" - 20 Hex Nuts
36	¼" - Washers
4	¾" - #6 Paw Head Screws

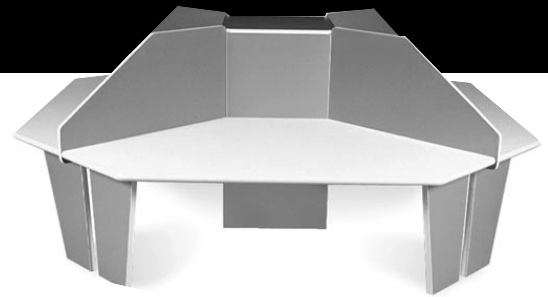


Thank you for purchasing your DEPCO Technology Lab Furniture! If you need further assistance, please call 1-800-767-1062.

Step 1:

Insert legs into slots in frame.

Note: Welds should be up on steel frame.

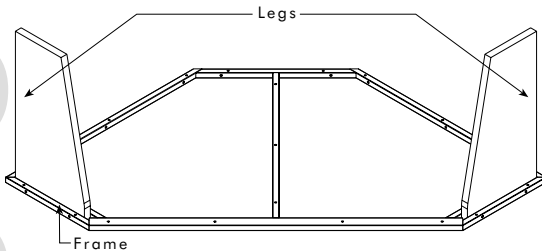


Step 2:

Insert (2) 3½" bolts into each leg and then place nuts and washers on bolts.

Note: It may be required to tap bolts through the holes with a hammer.

Tighten all bolts securely with nuts and washers.

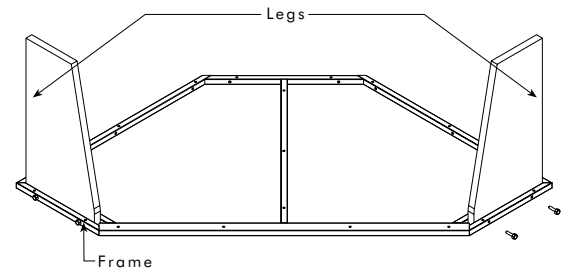


Step 3:

Make up quad back panel cube by locking 12 white assembly fittings together.

Rotate leg/frame assembly 180 degrees and place back panels on with (8) 2¼" carriage head bolts and then secure with washers and nuts.


Note: It may be required to tap bolts with a hammer.

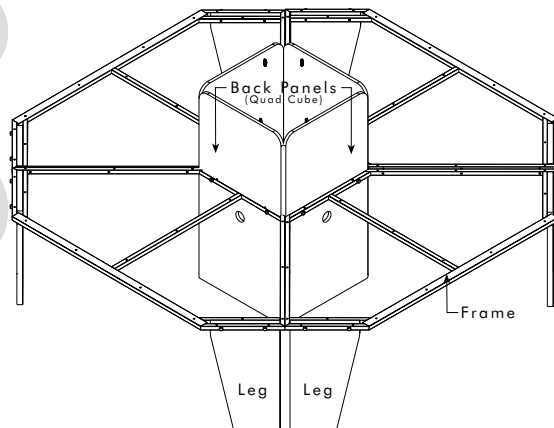

Step 4:

Place side panels on using the hole locations and secure with (12) 3½" hex head bolts and secure with washers and nuts.

Note: It may be required to tap bolts with a hammer.

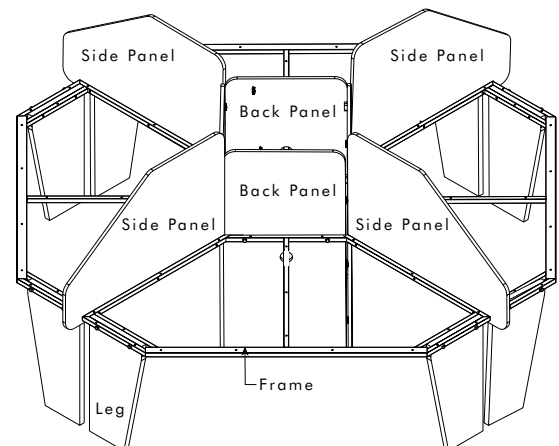


304: Quad Instructions

Step 5:


Place top on securing with 1½" wood screws.

Note: DO NOT over tighten screws or they will strip out.

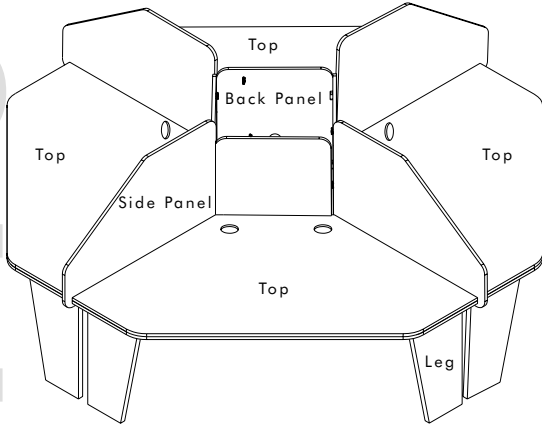

Step 6:

Set quad cap on top of back panels. Insert (12) grommets (may require tapping with a hammer) and screw in access panel using (4) #6 - ¾" pan head screws.

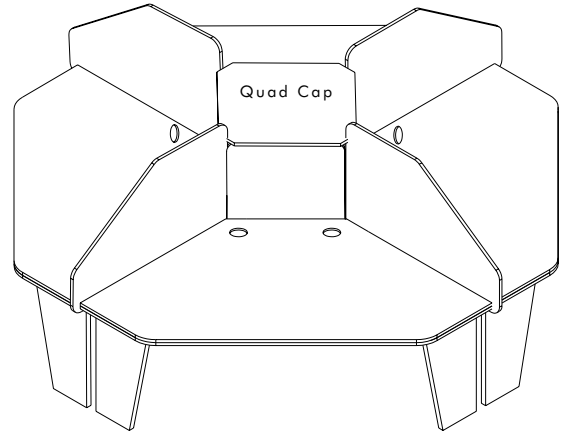

300 Series

