


Residential Wiring Cabinet Instructions



Hardware List:

There is no hardware with this piece of furniture. Everything is secured with cam locks which are already installed.

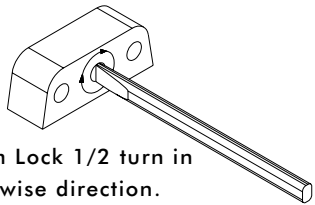


Turn Cam Lock 1/2 turn in the clockwise direction.

Thank you for purchasing your DEPCO Technology Lab Furniture! If you need further assistance, please call 1-800-767-1062.


Step 1:

Lie back on flat surface and place 3/4" piece of scrap material underneath it. Then place left and right side panels on using the cam locks.

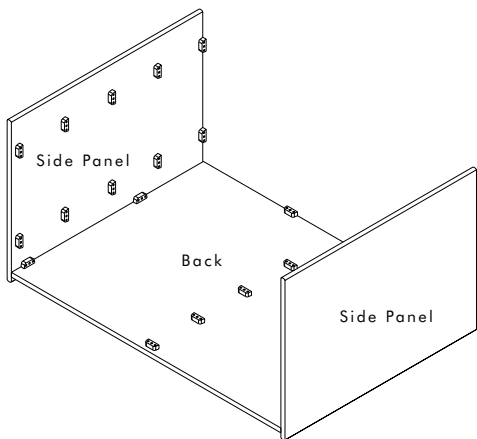


Step 2:

Place base on using cam locks.

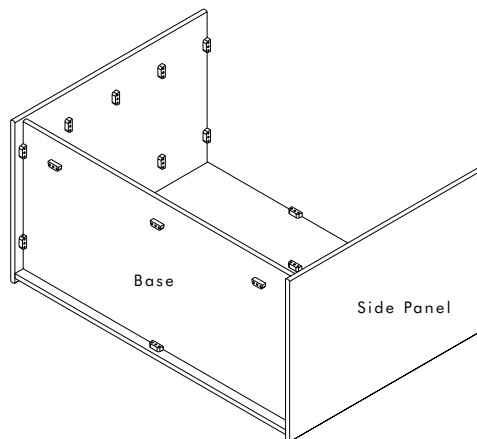


Step 3:

Attach toe kick on using cam locks.

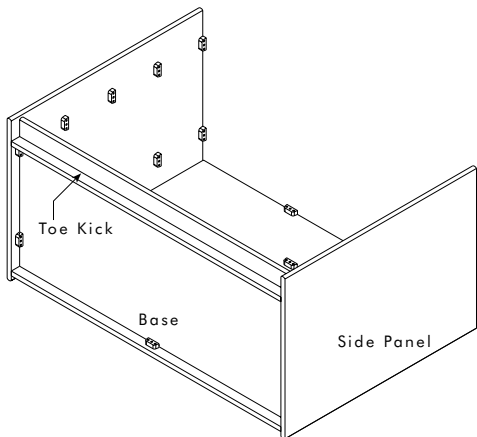

Step 4:

Attach top on using the existing cam locks.

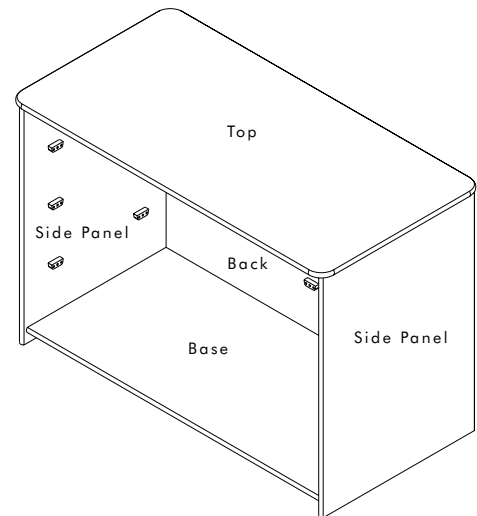


Residential Wiring Cabinet Instructions

Step 5:

Attach shelves by using existing cam locks.

Note: It is easiest to start with the top shelf and work your way down to the last shelf.

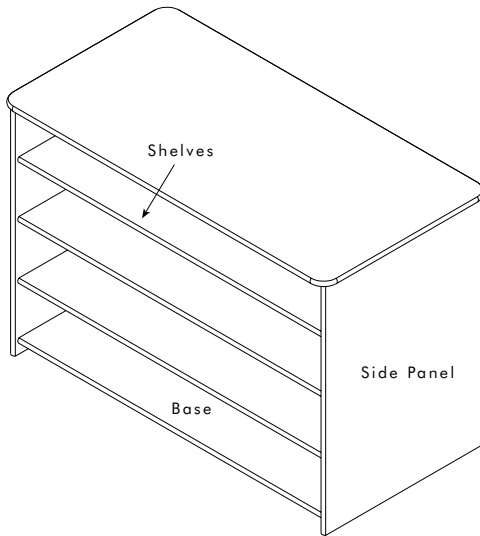

u
t
e
n
i
b
a
c

